

INSTALLATION OF THE ENGINE GOVERNOR CLUTCH ARM REPLACEMENT FOR EXISTING GOVERNOR ARM

Note or mark the position of the existing governor control arm. Remove the two fillister screws which attach the existing governor arm to the shaft protruding from the servo motor.



Install the replacement arm by sliding the clutch mechanism over the servo motor shaft with the arm in the same position. Make sure the arm is closest to the servo motor.

Tighten the new fillister screws provided with the new arm and safety wire into place.

The tension of the clutch is adjustable using the knurled knob on the end.

